


變速補助缸系列
SERVO,
GEARSHIFT

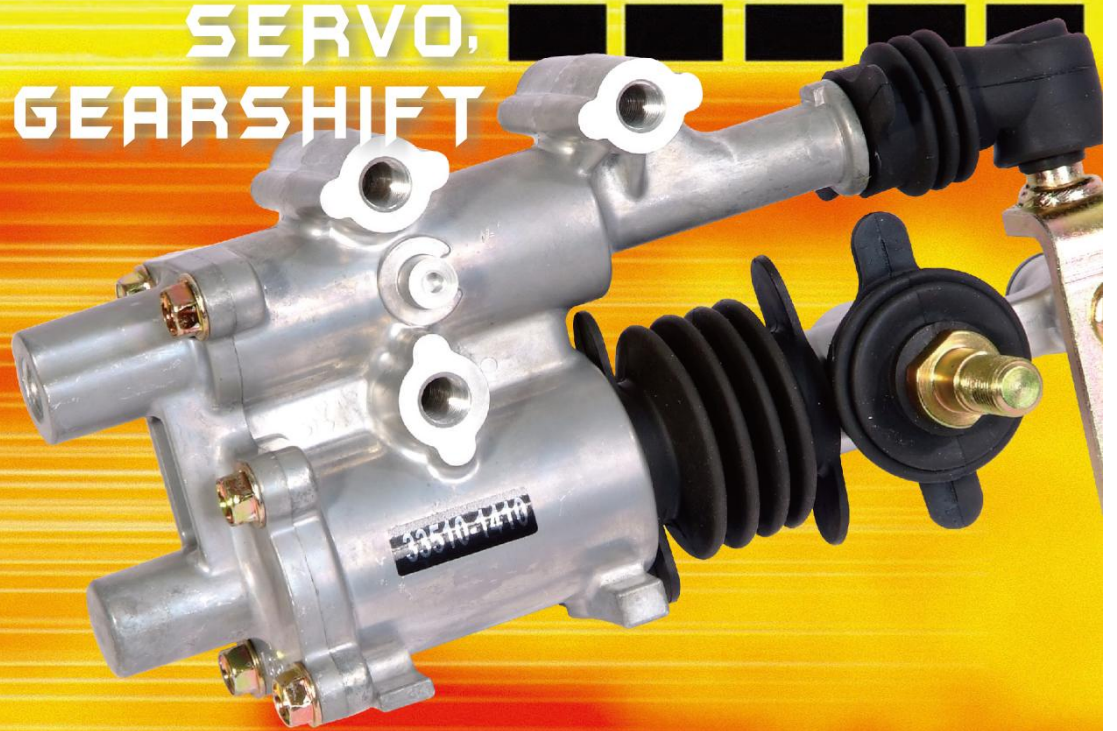



HNTC
GEARSHIFT, M/T, UPR
變速箱上蓋銅套BUSH+SPRING
M120 10SPEED
ME657709



HNTC
GEARSHIFT, M/T, UPR 3HOLE
變速箱上蓋彈簧SPRING x 2
M120 FP517 6S 7SPEED
ME657708-H



HNTC
GEARSHIFT, M/T, UPR
變速箱上蓋彈簧SPRING X2
M12-3 M12-4 M10-3 6S 7S 10S
ME662308



HNTC
COVER, TRANSMISSION UPPER
變速箱小蓋(全)2孔S/W.固孔4孔
F20C - 1998Y
33271-2302



HNTC
OIL PUMP, TRANSMISSION 6SP 7SP
變速箱機油邦浦總成.6/7速用
M120 M130
ME671568-H



HNTC
OIL PUMP, T/M 10 SPEED
變速箱機油泵總成
M120 M130 FP517
ME671569-H



HNTC
SHIFT CYLINDER, SERVO
開風活門汽缸
ZF 16 SPEED
0750-1320-100-H



HNTC
END, SHIFT CYLINDER EURO 2.
排檔開風汽缸內球頭防塵套
ZF16S151 二期車
33519-1060-1H



HNTC
VALVE, SHIFT CYLINDER
補助缸活門
ZF 16 SPEED
6038-211-086-H TRUCK
6038-211-085-H BUS



HNTC
END, SHIFT CYL VALVE EURO 2.
補助缸後蓋球頭組(二期)
ZF16S151二期16S
6038-211-1-H



HNTC
END, SHIFT CYL VALVE EURO 2.
補助缸後球頭修包(16S)
ZF16S151 LSH EXR370;K13C
33076-1602-H



HNTC
END, SHIFT CYL VALVE EURO 2.
變速補助缸前和尚頭(16速)
ZF16S151二期車K13C LSH EXR37
33076-1600-H



HNTC
VALVE, SHIFT CYLINDER EURO 3.
補助缸(ZF16S151)
ZF16S151三期K13C-TV 6WA1-20
0501-211-290-H



HNTC
SERVO, POWERSHIFT
變速補助缸(雙管)柄方孔.右
FG GD FF FG1
33510-1410



HNTC
SERVO, POWERSHIFT
變速補助缸(雙管)
FUR FRR
1-33730-156-H



HNTC
SERVO, POWERSHIFT
變速補助缸(雙管)柄圓孔.右
FK61F
ME642651



HNTC
SERVO, GEARSHIFT
變速補助缸 RH
FM557-96(15T) FM657
FK617 MP617 FH217
ME636977



HNTC
SERVO, GEARSHIFT
變速補助缸 LH, 64/81/62mm
M130 M14 FP51JRL*03
654-01015 ME677211
654-01098



SERVO, GEARSHIFT
變速補助缸 LH
FP517 FP510
ME670046 654-01045
SERVO, GEARSHIFT
變速補助缸 LH
FP415 K13C SH
654-01006
ME657610-H



SERVO, GEARSHIFT
變速補助缸(RH.大管.加強)
MGH 240P/H
33510-1060



SERVO, GEARSHIFT
變速補助缸 RH 加強型
LRM LCM
33510-1230



SERVO, GEARSHIFT
變速補助缸 RH
CW520 EXR330 LSH LRM
FN527 FM515 MGH
654-04000



SERVO, GEARSHIFT
變速補助缸 RH
FM65(10速) 6M60 17T
ME679240



SERVO, GEARSHIFT
補助缸 RH
12速 CK450*93
33172-90102 654-02014
32172-90102



SERVO, GEARSHIFT
補助缸 RH 十字型
LFS*98 GH FG FM2P
33510-1270 33510-1450
654-04505



SERVO, GEARSHIFT
變速補助缸 RH T型
LSH TRAILER HEAD
33510-1280
R/KIT 33590-1310



SERVO, GEARSHIFT
變速補助缸 RH
EXR340-91 D=28
1-33730062-1
654-03076



SERVO, GEARSHIFT
 變速補助缸
 MS618 MP618
 654-01112 ME662831



SERVO, GEARSHIFT
 變速補助缸 LH
 FVR*96 6HE1 D=28mm
 1-33730127-0



SERVO, GEARSHIFT
 變速補助缸 RH
 EXR340*96 6WA1T D=30mm
 1-33730103-1
 654-03083



SERVO, GEARSHIFT
 變速補助缸 RH
 LSH LFS
 33510-1160 654-04017



SERVO, GEARSHIFT
 變速補助缸RH 三孔
 CWA451 CD461
 32172-90202



SERVO, GEARSHIFT
 補助缸(改良型) RH
 MFG-90福將*4孔
 33510-1055



CYLINDER, GEARSHIFT
 高低檔控制缸總成
 M12-3S10 FV415
 ME652800 661-00518
CYLINDER, GEARSHKFT
 高低檔控制缸總成
 FP517 FV515 M120
 ME671397



VALVE, H/LA'SSY
 高低檔控制缸(十速)行程32mm
 M8SO 6M60
 ME675132-H



VALVE, HIGH/LOW
 16速高低檔氣壓開關
 ZF151 K13C LSH EXR360
 0501-209-435
 35450-1020



VALVE, H/LT/M
小蓋高低檔切換活門(2珠)
ZF16S151 (2/3期; ALL)
6038-202-045

VALVE, H/LT/M
小蓋換檔活門滾珠
K13C 16S
0501-209-188



KIT, H/L T/M
ZF.16速高低檔控制缸修理包
ZF16S151 LSH1K(16S)
1315-334-033



SEAL KIT, H/L CYL
高低檔控制缸修理包
M12-3 M12-4 M130
ME652403

SEAL KIT, H/L CYL
高低檔控制缸修理包
M120 FP510 FP517
ME675234



SERVO KIT, GEARSHIFT
變速補助缸修理包
MP618 MS715
9365-0039



SERVO KIT, GEARSHIFT
變速補助缸修理包
FP415 FV419 FP418
9365-0029

SERVO KIT, GEARSHIFT
變速補助缸修理包
CW520
9365-0042



81-82170-6156
HIGH / LOW VALVE
高低檔控制活門
MAN



CONTROL VALVE
擋位補助活門開關
P113 P114
1319557



CONTROL VALVE
擋位補助活門開關
GH FG
41480-1100 X8880054



CONTROL VALVE
擋位補助活門開關
FL12 FL10
1068951



CONTROL VALVE
 擋位補助活門開關
 GH FG
 44540-2170 X8880843



CASE, H/L T/M
 高低檔控制缸殼
 ZF-16S151 LSH1K
 1315-334-052
 ZF-161S151
 1315-334-056



L-JOINT, T/M L型接頭
 FUSO NISSAN
 ME628803-H @ 1.077
 ME628800-H @ 1.000
 ME626645-H @ 0.905
 ME629346-H @ 0.619
 ME629325-H @ 0.889
 ME629329-H @ 0.818
 25097-90078-H @ 1.125
 ME629331-H @ 0.733
 ME629326-H @ 0.870
 ME629302-H @ 1.053